

DL8AR (Round Downlight)

Before You Begin

Read and follow these instructions completely and carefully

⚠ Warning

RISK OF ELECTRIC SHOCK

- . Turn off or disconnect input power before installation or servicing
- . Verify that supply voltage is correct by comparing it with the luminaire label information or product specification
- . Properly ground electrical enclosure

RISK OF FIRE/INJURY


- . Follow all NEC and local codes
- . Use only UL or IEC approved wire for input connections (minimum wire size 18 AWG)
- . Wear gloves and safety glasses at all times when performing installation or servicing

RISK OF PRODUCT DAMAGE


- Failure to follow instructions could result in damage to product and void ALL warranties!
- . DO NOT exceed fixtures maximum operating temperature rating

Installation


Recommended tools during installation :

- b) M4 screw driver slot head 


Carefully remove unit from packing box and inspect for defects before installation

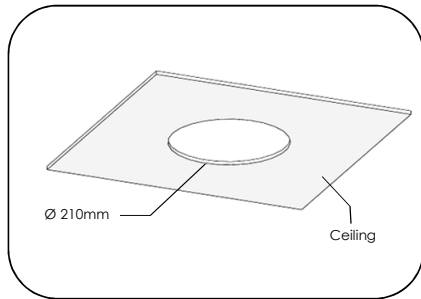


1 Make an opening 210mm in diameter

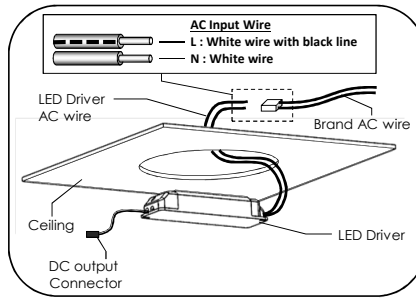


2 Install LED Driver AC wire to branch AC wire as in diagram
 . Install Dimmable SW wire to branch Variable switch as in diagram
 . Connection according to local wiring requirements.

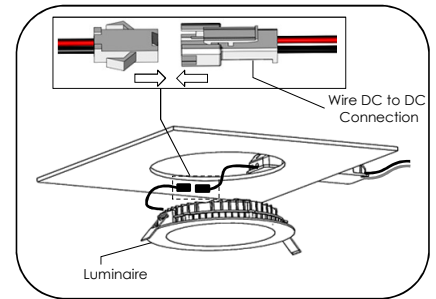

3 Connect DC to DC Connector as in diagram

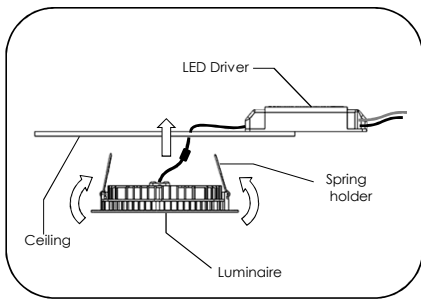

4 Push spring holders upward as in diagram shown

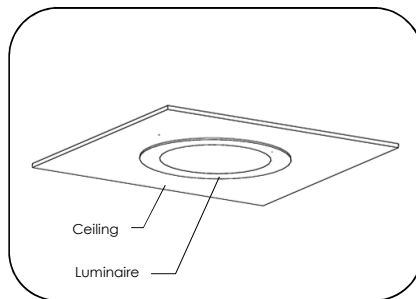

5 Push the luminaire firmly in place and flush to the ceiling

Troubleshooting

Symptom	Solution
Luminaire will not turn on	<ul style="list-style-type: none"> . Check wire connectors are properly connected . Verify input voltage is within specs. . Verify color of input wires match the color of the wires connected to

