

DL8AR (Round Downlight)

Before You Begin

Read and follow these instructions completely and carefully

**⚠ Warning**

**RISK OF ELECTRIC SHOCK**

- . Turn off or disconnect input power before installation or servicing
- . Verify that supply voltage is correct by comparing it with the luminaire label information or product specification
- . Properly ground electrical enclosure

**RISK OF FIRE/INJURY**


- . Follow all NEC and local codes
- . Use only UL or IEC approved wire for input connections (minimum wire size 18 AWG)
- . Wear gloves and safety glasses at all times when performing installation or servicing

**RISK OF PRODUCT DAMAGE**


- Failure to follow instructions could result in damage to product and void ALL warranties!
- . DO NOT exceed fixtures maximum operating temperature rating

Installation


**Recommended tools during installation :**

- b) M4 screw driver slot head 


Carefully remove unit from packing box and inspect for defects before installation

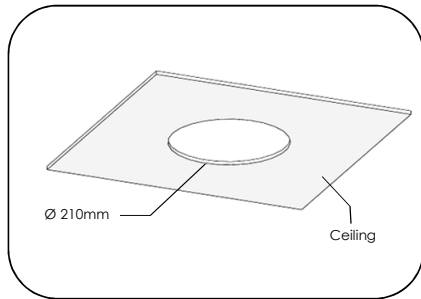


**1** Make an opening 210mm in diameter

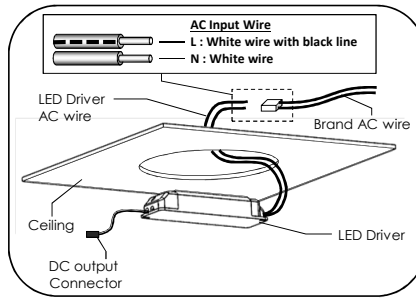


**2** Install LED Driver AC wire to branch AC wire as in diagram  
 . Install Dimmable SW wire to branch Variable switch as in diagram  
 . Connection according to local wiring requirements.

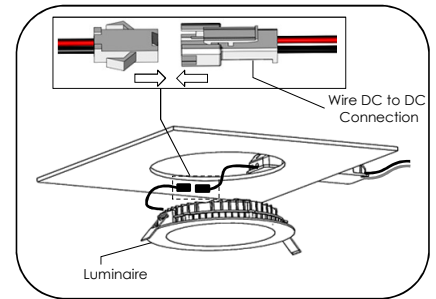

**3** Connect DC to DC Connector as in diagram

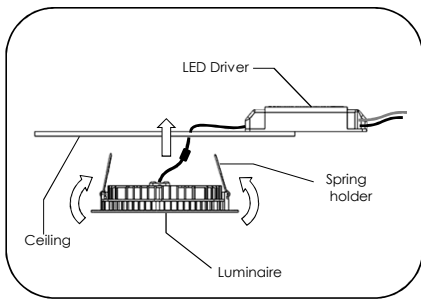

**4** Push spring holders upward as in diagram shown

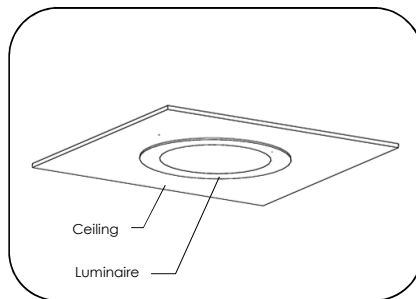

**5** Push the luminaire firmly in place and flush to the ceiling

Troubleshooting

Symptom	Solution
Luminaire will not turn on	<ul style="list-style-type: none"> <li>. Check wire connectors are properly connected</li> <li>. Verify input voltage is within specs.</li> <li>. Verify color of input wires match the color of the wires connected to</li> </ul>

